

TEAKOIL

For the protection and maintenance of wooden garden furniture. Enhances and protects from all weather conditions.

- » Penetrates into the wood and is not film-forming.
- » Provides natural protection.
- » Especially adapted for garden furniture.



1L

5L



PROTECTION

OUTDOOR

PREPARATION

Pre-wet the wood for an optimal result of the product. Make sure that all old finishing layers are completely removed. First clean the wood with WOODCLEANER or DEGREYER Ciranova®.

APPLICATION

Apply TEAKOIL with a cloth or brush. Wipe off the excess oil with a cloth after +/- 10 minutes. For application on new wood, repeat the treatment twice. TEAKOIL can be used on all interior- and exterior wood surfaces

MAINTENANCE

Regularly maintain the wood with Ciranova® TEAKOIL.

TECHNICAL DATA

Product type

solvent-based

Cleaning

Cleaning Thinner Ciranova®

Viscosity

+/- 12 sec - DIN 4 mm

Solid content

+/- 45%

Coverage

+/- 10 m²/liter

Drying times

paintable after: +/- 6 hours

dry after: +/- 12 hours

Storage/transport

between 5°C and 25°C

Disposal

dispose of residue and empty packaging in accordance with local ordinances.